



## OWNER'S MANUAL


v120208

---

Tools / items required:

- Small 3 - 5 lbs. maul or large hammer (not included)
  - Two (2) "D" sized batteries (not included)
  - Channel Lock Pliers (not included, useful for guide pin removal)
- 

### COMPONENTS DIAGRAM

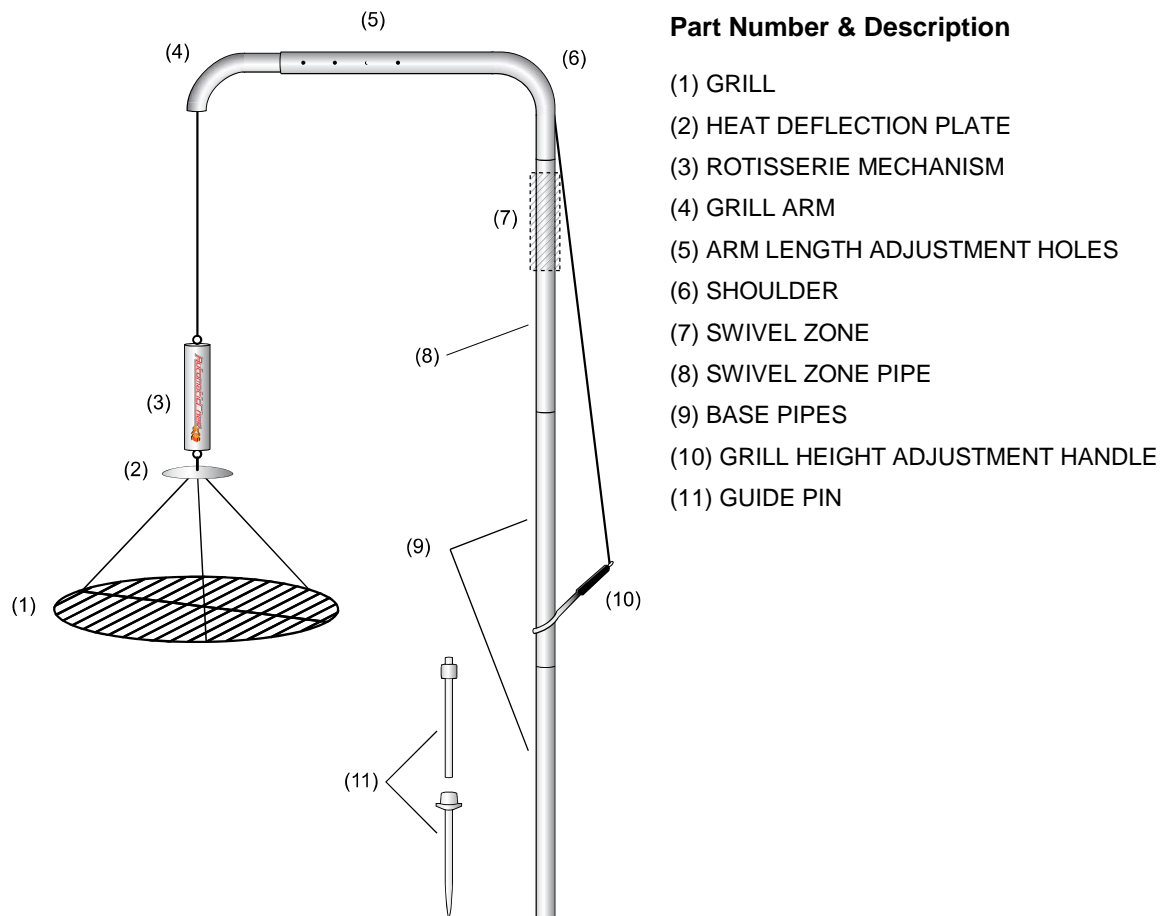

### ASSEMBLY INSTRUCTIONS

- Step 1)** Read the entire Assembly Instructions and Warnings before proceeding to Step 2. Refer to the Components Diagram for assembly.
- Step 2)** Open the hard plastic case to expose the contents. Retrieve the pieces of the GUIDE PIN from the case.

- Step 3)** Tightly screw the two pieces of the GUIDE PIN together, being careful to avoid cross-threading.
- Step 4)** See the cautionary notes for Step 4 before proceeding. Using a maul or hammer, carefully pound the sharp end of the GUIDE PIN into the ground approximately 4-16" away from the edge of the fire pit. Position the GUIDE PIN so that the GRILL will hang in the area close to center of the fire pit. Make sure the GUIDE PIN is pounded straight down into the ground (90 degree angle to the ground). Continue to pound the GUIDE PIN until it is firmly in the ground.

**Note: The GUIDE PIN is designed to be pounded in at different depths. Make sure the GUIDE PIN is secure in the ground. If the GUIDE PIN is loose, do not attempt to secure the base to the pin. Remove the GUIDE PIN and try another location in the ground.**



**CAUTION: Always wear eye and hand protection when pounding the GUIDE PIN into the ground. If the property is owned by others, obtain permission before you begin. Be careful of buried lines and only pound into areas that are free of utility lines. Failure to obey this requirement could result in death or serious injury.**

- Step 5)** Retrieve the SHOULDER and GRILL ARM portion (with the cable/handle and rotisserie unit) and slide the large round end of the GRILL HEIGHT ADJUSTMENT HANDLE over the SWIVEL ZONE PIPE.
- Step 6)** Slide the SWIVEL ZONE PIPE into the SHOULDER pipe.
- Step 7)** Retrieve the two BASE pipes (interchangeable) from the case and connect them together to form the BASE.
- Step 8)** Slide the BASE into the SWIVEL ZONE PIPE.
- Step 9)** Slide the BASE over the GUIDE PIN previously pounded in the ground.
- Step 10)** The ROTISSERIE MECHANISM should hang freely from the GRILL ARM pipe.
- Step 11)** Install two (2) "D" sized batteries (not included) into the ROTISSERIE MECHANISM.
- Step 12)** Retrieve the hinged GRILL, open it towards the ground, and attach its cable to the ROTISSERIE MECHANISM hook. The Automatic Chef is now completely assembled!

## GRILL ADJUSTMENT

- Step 1)** Adjust the GRILL ARM length by pushing in on the spring-loaded locking pin and sliding the GRILL ARM in or out so the GRILL is over the desired area of the fire pit and then make sure the locking pin is aligned with one of the ARM LENGTH ADJUSTMENT HOLES.



**WARNING: Do not adjust the GRILL ARM length out past the "STOP" point or the GRILL ARM will fall out.**

- Step 2)** Adjust the GRILL height by grabbing the GRILL HEIGHT ADJUSTMENT HANDLE and tilting it downward until it moves freely up and down along the BASE. Move the handle downward to raise the GRILL and move the handle upward to lower the GRILL. When you have adjusted the GRILL to the desired height, tilt the handle upwards until it stops against the BASE and release it.

## BEFORE STARTING FIRE

- Step 1)** Carefully and slowly swing the Automatic Chef away from the fire pit and proceed with starting your fire using proper precautions.
- Step 2)** After the fire is reduced to hot coals, load your desired food items onto the GRILL.
- Step 3)** After loading your desired items onto the grill, switch the ROTISSERIE MECHANISM to the ON position and then carefully and slowly swing the Automatic Chef over the fire and lower the GRILL to the desired height.



**WARNING: The Automatic Chef is not intended to be used over open flame. Positioning the GRILL over open flames will damage the ROTISSERIE MECHANISM. The Automatic Chef is intended for cooking over hot coals only!**

## DISASSEMBLY INSTRUCTIONS



**WARNING:** Do not attempt to disassemble the unit until it has completely cooled down to the touch. Early disassembly may result in severe burns, damage to the carrying case or a fire.

**Step 1)** Unhook the GRILL from the ROTISSERIE MECHANISM and store into proper area of the carrying case.

**Step 2)** Adjust the GRILL ARM length in as far as it will go into the SHOULDER.

**Step 3)** Separate the SWIVEL PIPE from the SHOULDER and return the GRILL ARM, SHOULDER, and SWIVEL PIPE to the case.

**Step 4)** Separate the pieces that form the BASE and return them to the case.

**Step 5)** Pull the GUIDE PIN from the ground and return it to the case.

**Note:** If the GUIDE PIN is difficult to remove, use a pair of pliers to rotate the GUIDE PIN back and forth while pulling in an upward direction to remove the pin.

## WARNINGS



- 1) Keep the Automatic Chef away from open flames to avoid damage to the paint and ROTISSERIE MECHANISM.
- 2) Make sure the GUIDE PIN is firmly and securely driven into solid / stable ground before the BASE is installed over the GUIDE PIN.
- 3) Only pound the GUIDE PIN into the ground after you confirm the area is free of utility lines.
- 4) The Automatic Chef is intended for cooking over coals only (wood or charcoal). Damage may occur if the Automatic Chef is lowered too far into open flame or placed over open flame.
- 5) Always wear protective gloves or an oven mitt when attending to the Automatic Chef during use and disassembly. All items may be too hot to touch.
- 6) Always swivel the Automatic Chef from the SWIVEL ZONE only, and use caution as the zone may be hot.
- 7) DO NOT exceed 8 lbs. of weight on the GRILL.
- 8) Always switch the ROTISSERIE MECHANISM to the OFF position before attending to the GRILL to avoid damaging the ROTISSERIE MECHANISM.
- 9) If you intend to burn the GRILL clean before storing, unhook the ROTISSERIE MECHANISM from the GRILL and cable, and hook the GRILL directly to the cable before lowering the GRILL into the fire.
- 10) Always adjust the GRILL ARM length before loading food onto the GRILL.
- 11) DO NOT adjust the GRILL ARM length out past the "STOP" point or the GRILL ARM will fall out.
- 12) DO NOT attempt to store the Automatic Chef if it is too hot to touch. Failure to carefully obey these warnings may result in severe damage to person or property, including the carrying case. This may result in a possible fire hazard.
- 13) Remove batteries from the ROTISSERIE MECHANISM if you do not intend to use the Automatic Chef for an extended period of time.
- 14) Although the Automatic chef is a weather resistant product, damage may occur to the ROTISSERIE MECHANISM if it is left out in extended periods of rain or snow. Pipes, being made of steel, may also rust after extended periods of time.
- 15) Always wear eye and hand protection when pounding or removing the GUIDE PIN.
- 16) Keep all parts and accessories of the Automatic Chef away from children.

## LIMITED WARRANTY

The manufacturer warrants this device to be free from defects in workmanship or material under normal use for one year from the date of purchase. Manufacturer's obligations under this limited warranty are limited to replacing, adjusting, or repairing the unit if returned along with the proof of purchase. This warranty is void if the unit has been tampered with, maliciously damaged, physically abused, or if the operating and assembly instructions are not strictly obeyed.

The enforceability of this warranty is limited to the original consumer purchaser and is not transferable to, or enforceable by, any subsequent owner. In the event of a defect, malfunction or other failure to conform to this warranty, manufacturer will, at its sole discretion, repair or replace the unit at no charge. You are responsible for all shipping cost in connection with warranty service. This warranty commences on the date of retail purchase and shall be effective for a period of one year.

THERE ARE NO EXPRESS WARRANTIES COVERING THE UNIT OTHER THAN THOSE SET FORTH IN THIS WARRANTY. ALL IMPLIED WARRANTIES ARE LIMITED TO THE PERIOD OF THIS WARRANTY AND NO WARRANTIES, EXPRESS OR IMPLIED, EXTEND BEYOND THIS PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

Manufacturer will in no event be liable for any consequential, incidental, indirect or special damages (including, but not limited to, lost profits) arising out of or in connection with the use, misuse or function of the unit. Some states do not allow exclusion of limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If you feel the device is not functioning properly please review this manual, particularly the instructions. If you still feel warranty service is required, please follow the instructions below:

- 1) To obtain service during the warranty period, please call **920.857.3262** or email **service@automatic-chef.com** to obtain an RMA (Return Material Authorization) number and shipping instructions. Remember to return the device postage paid, insured and in suitable packaging.
- 2) For your own protection, obtain a proof of delivery receipt. Shipping costs are your responsibility.
- 3) You must enclose with the unit the following information:
  - a. The completed RMA Form available at **www.automatic-chef.com/support.php**.
  - b. Your name, complete return address and written description of the problem. (No PO Box please.)
  - c. A telephone number where you can be reached during normal business hours.
  - d. A copy of your dated sales receipt or invoice. If the device was a gift, please follow the instructions on the RMA Form.

**Note: Failure to obtain an RMA number prior to returning the device can result in extended delays and the device may be returned to you without servicing.**

## **DISCLAIMER**

Manufacturer expressly disclaims any liability for incidental, special, or consequential damages of any nature under any legal theory. Manufacturer assumes no responsibility for consequences to users who use this product.

Manufacturer does not warrant that the operation of the product will be error-free. Manufacturer is not responsible for any consequences arising from failure to follow instructions or relating to the product's use. This warranty does not apply: (a) to consequences caused by accident, abuse, tampering, misuse, flood, fire, earthquake or other external causes; (b) to consequences caused by operating the product outside the permitted or intended uses described by Manufacturer; (c) to consequences caused by service performed by anyone who is not a representative of Manufacturer or a Manufacturer Authorized

Service Provider; or (d) to a product or part that has been modified to alter functionality or capability without the written permission of Manufacturer.

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, STATUTORY, EXPRESS OR IMPLIED. AS PERMITTED BY APPLICABLE LAW, MANUFACTURER SPECIFICALLY DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF MANUFACTURER CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW ALL SUCH WARRANTIES ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPAIR OR REPLACEMENT SERVICE AS DETERMINED BY MANUFACTURER IN ITS SOLE DISCRETION.

Manufacturer does not authorize any reseller, agent, or employee to make any modification, extension, or addition to this warranty. If anyone determines any terms to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, MANUFACTURER IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES UNDER ANY LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOSS OF USE; LOSS OF REVENUE OR INCOME; LOSS OF ACTUAL OR ANTICIPATED PROFITS (INCLUDING LOSS OF PROFITS FROM A CONTRACT); LOSS OF THE USE OF MONEY; LOSS OF ANTICIPATED SAVINGS; LOSS OF BUSINESS; LOSS OF OPPORTUNITY; LOSS OF GOODWILL, OR LOSS OF REPUTATION.

Some countries, states and provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long an implied warranty or condition may last, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by country, state or province. This limited warranty is governed by and construed under the laws of the country where the product was purchased.

**JnB Enterprises, LLC • 101 South Military Ave. • Green Bay, WI 54303**  
**Phone: 920.857.3262 Email: [info@automatic-chef.com](mailto:info@automatic-chef.com)**

**[www.automatic-chef.com](http://www.automatic-chef.com)**